


	TECHNICAL BULLETIN		CODE
	Subject:		TBSC-007-12
CUSTOMER CARE AND TECHNICAL ASSISTANCE	Instalace stredovych adapteru OS-Fit		DATE
			17-12-2012
			PAGE
			1 / 5


Tato technický bulletin popisuje nejdůležitější specifikace a detaily montáže výše uvedených výrobků.

1 - STREDOVE ADAPTERY: TECHNICKE SPECIFIKACE / KOMPATIBILITA

DULEZITE!

Pokud budou tyto adaptory instalovány pro systém EPS, je nejprve nutné nainstalovat středové vodičko kabeláže EPS.

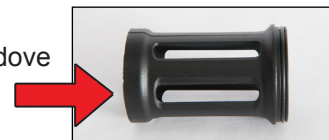

		BB30 68x42	86,5x41	BB30 68x46	BB RIGHT
ULTRA TORQUE™					
					
					
					
					
POWER TORQUE™					
					
					
					
					


Adaptory je možné instalovat pouze na ram, jehož rozměry středové spojky odpovídají rozměrům určených pro jednotlivé typy adaptéru. Tento technický bulletin se speciálně zabývá vymezením spoje mezi středovou spojkou a středovým adaptérem. Pokud rozměry středové spojky přesně odpovídají specifikovaným tolerancím (Fig 1, Fig. 2 a Fig. 3) tak je správná funkčnost adaptéru garantována těmito odpovídajícími rozměry. Pokud středová spojka neodpovídá přesně požadovaným rozměrům či při jakýchkoliv pochybnostech, doporučujeme provést instalaci středových misek za použití speciálních přípravků (viz. postup popisovaný v kapitole c.4).

WARNING! All data and information of whatever kind and nature contained in, referred to or attached to this document, as well as any and all right (whether or not registered and/or patentable) and title thereto, belong exclusively to CAMPAGNOLO S.r.l. You are therefore warned to treat said data and information as strictly secret and confidential, not to divulge or disclose them - whether orally or in writing - in any way, not to use them for the benefit of any party other than CAMPAGNOLO S.r.l. You will be directly responsible towards CAMPAGNOLO S.r.l. for any direct, indirect, consequential or incidental damages which may derive to the latter in consequence of a breach of said provisions by your directors, officers, representatives, counsels, agents and/or employees.


	TECHNICAL BULLETTIN		CODE
	Subject:		TBSC-007-12
CUSTOMER CARE AND TECHNICAL ASSISTANCE	Instalace stredovych adapteru OS-Fit		DATE
			17-12-2012
			PAGE
			2 / 5

2 - ROZMERY A TOLERANCE STREDOVYCH SPOJEK

2.1 - STREDOVA SPOJKA L = 86.5 mm X 41 mm (FIG. 1)

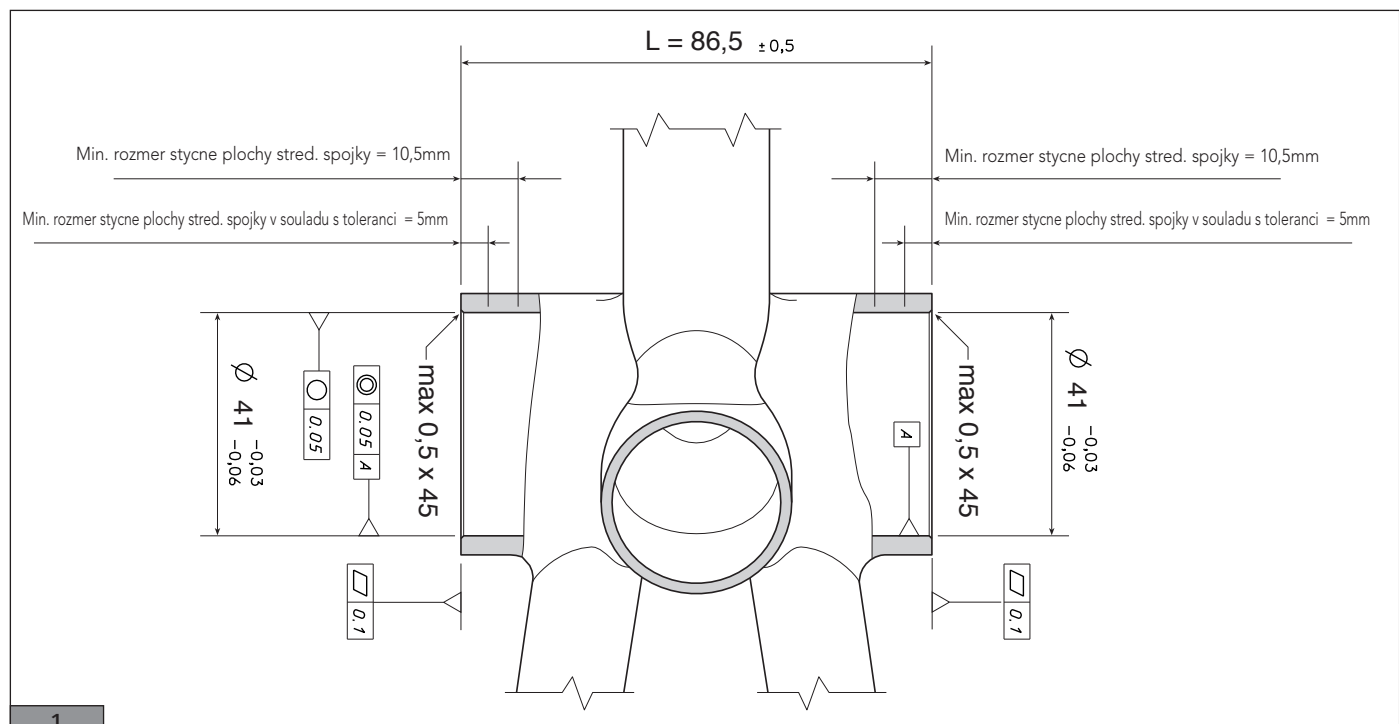


2.2 - STREDOVA SPOJKA L = 68 mm X 42 mm (FIG. 2)

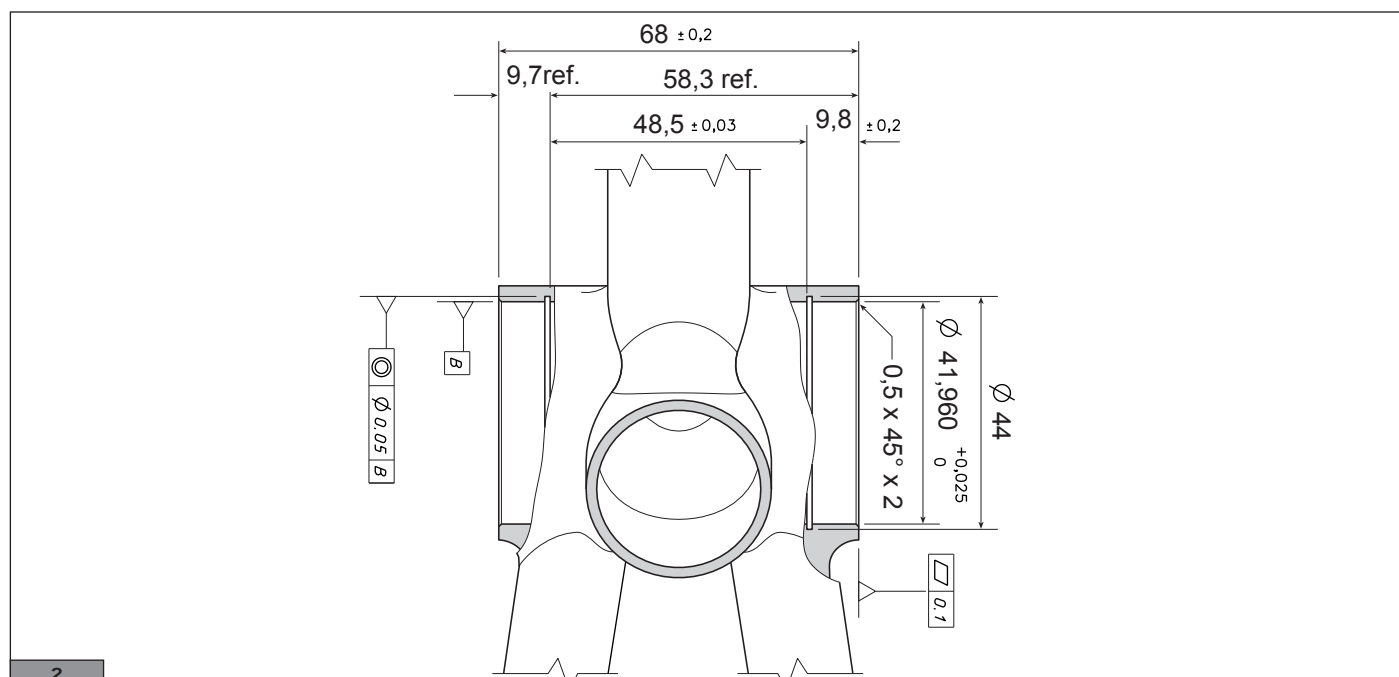

WARNING! All data and information of whatever kind and nature contained in, referred to or attached to this document, as well as any and all right (whether or not registered and/or patentable) and title thereto, belong exclusively to CAMPAGNOLO S.r.l. You are therefore warned to treat said data and information as strictly secret and confidential, not to divulge or disclose them - whether orally or in writing - in any way, not to use them for the benefit of any party other than CAMPAGNOLO S.r.l. You will be directly responsible towards CAMPAGNOLO S.r.l. for any direct, indirect, consequential or incidental damages which may derive to the latter in consequence of a breach of said provisions by your directors, officers, representatives, counsels, agents and/or employees.

	TECHNICAL BULLETTIN		CODE
	Subject:		TBSC-007-12
CUSTOMER CARE AND TECHNICAL ASSISTANCE	Instalace stredovych adapteru OS-Fit		DATE
			17-12-2012
		PAGE	3 / 5


2.3 - STREDOVA SPOJKA L = 68 mm X 46 mm (FIG. 3)

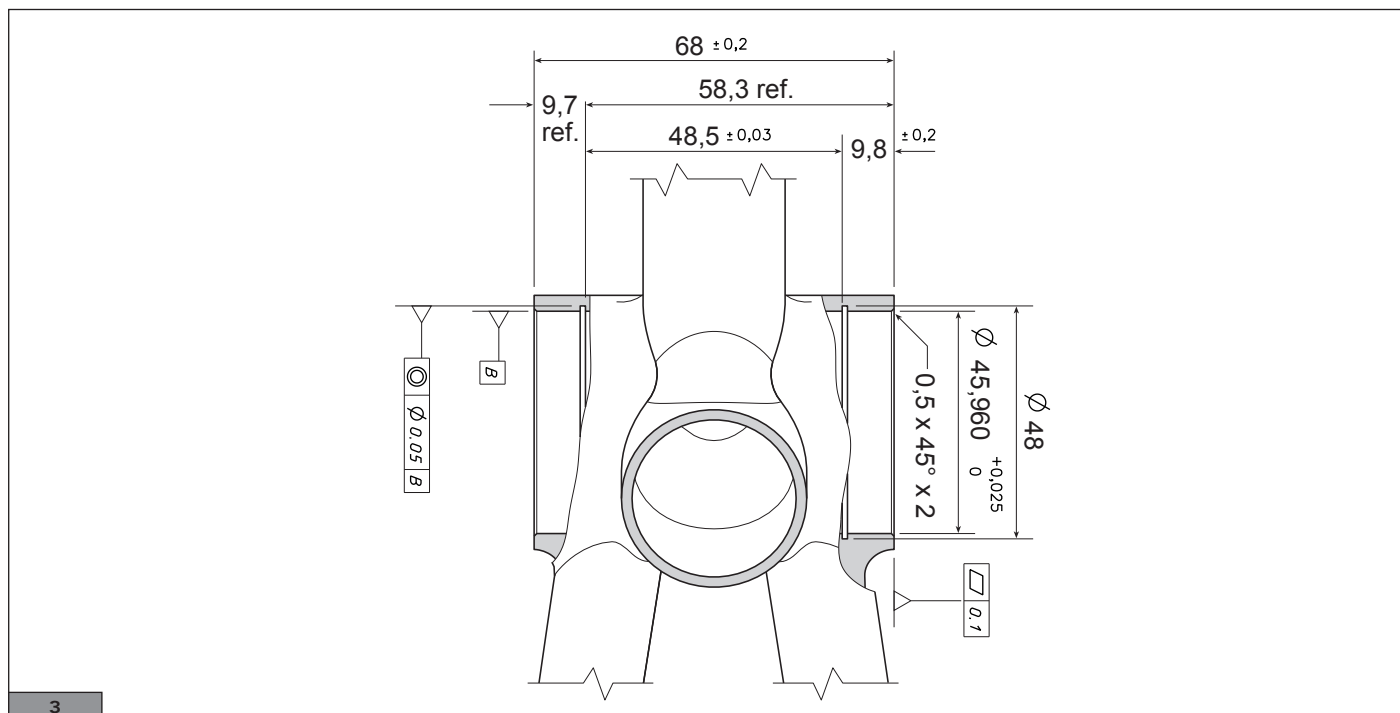

3 - NARADI K MONTAZI STREDOVYCH ADAPTERU

UPOZORNENI

K montazi pouzivejte VYHRADNE lis s oznacenim UT-BB140 (Fig.4).


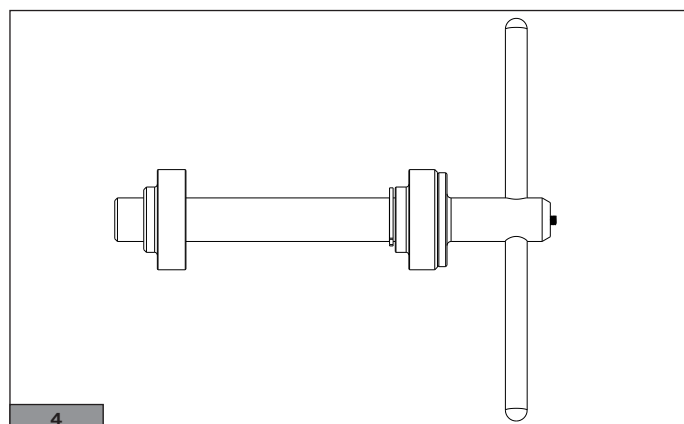


	TECHNICAL BULLETIN		CODE
	Subject:		TBSC-007-12
CUSTOMER CARE AND TECHNICAL ASSISTANCE	Instalace stredovych adapteru OS-Fit		DATE
			17-12-2012
			PAGE
			4 / 5

4 - MONTAZ STREDOVYCH ADAPTERU

• Dukladne odstrante veskere necistory ktere se nachazi na/vne stredove spojky. Plochy budouciho spoje spojky a adapteru ocistete technickym benzinem a nechte radne oschnout.

• Dukladne ocistete stycne plochy adapteru (Fig. 6). K ocisteni pouzijte tez technicky benzin. Vse nechte radne oschnout. Oci-stenych ploch se jiz nedotykajte.

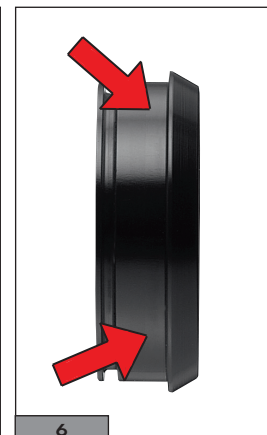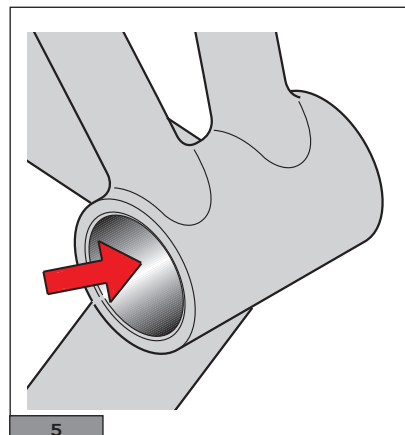

• Pro urychleni procesu vytvrzeni lepidla ktere bude pouzito pozdeji aplikujte aktivator Loctite Primer 7471 ci Loctite Primer 7649 a to na celou stycnou plochu stredove spojky (Fig. 7). Nechte zaschnout cca po dobu 5 minut a nasledne za pomoci technickeho benzinu odstrante prebytecny aktivator.

• Vyse popsanou aplikaci aktivatoru Loctite Primer 7471 ci Locti-te Primer 7649 provedte tez na stycne plochy adapteru. Nechte zaschnout po dobu 5 minut.




• K naneseni lepidla Loctite 603 (kratsi doba schnuti) nebo Locti-te 609 na stycne plochy stredovych adapteru pouzijte stetecek.

• Stetecek umyjte v technickem benzinu.




	TECHNICAL BULLETIN	CODE TBSC-007-12
	Subject:	DATE
CUSTOMER CARE AND TECHNICAL ASSISTANCE	Instalace stredovych adapteru OS-Fit	17-12-2012
		PAGE 5 / 5

- Zatlačte oba adaptéry do středové spojky tak aby jejich O-kroužky zmizely ve středové spojkě (Fig. 9).

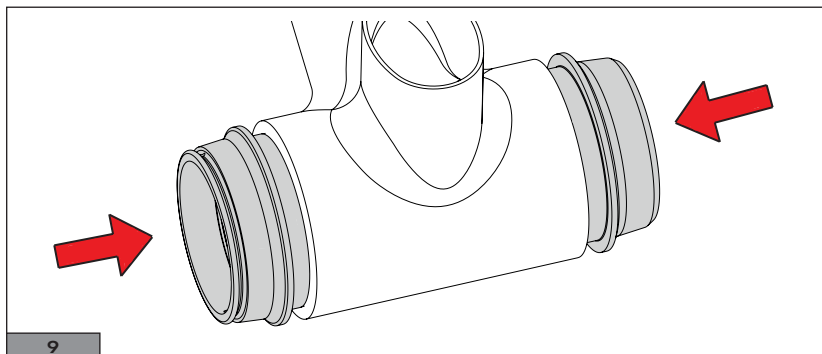


- Zasunte lis UT-BB140 do pravého adaptéru tak, aby se zcela oprel do vnitřní stěny prave misky/ adaptéru.
- Dotáhnete protilehlou část lisu UT-BB140 tak aby zcela dosedla do leve misky/adaptéru (Fig. 10).

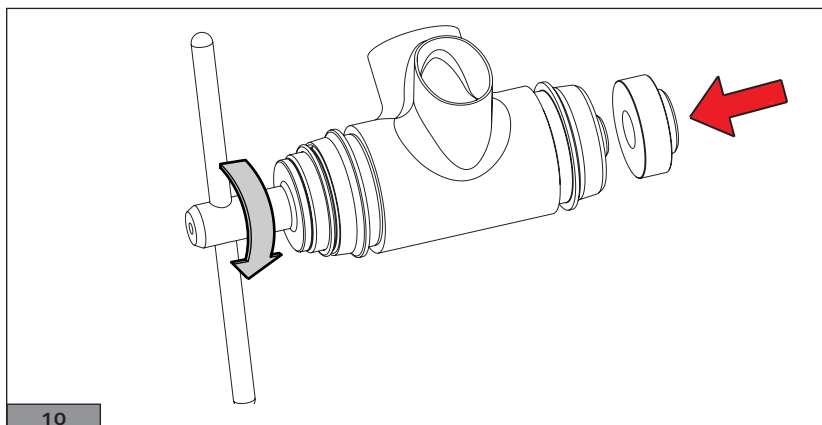

- Otáčejte pakou lisu ve směru hodinových ručiček tak dlouho dokud adaptéry zcela nezajedou do středové spojky (Fig. 11).

Před tím nežli demontujete lis UT-BB140 se ujistete zdali jsou adaptéry správně usazené ve středové spojkě (Fig. 11).

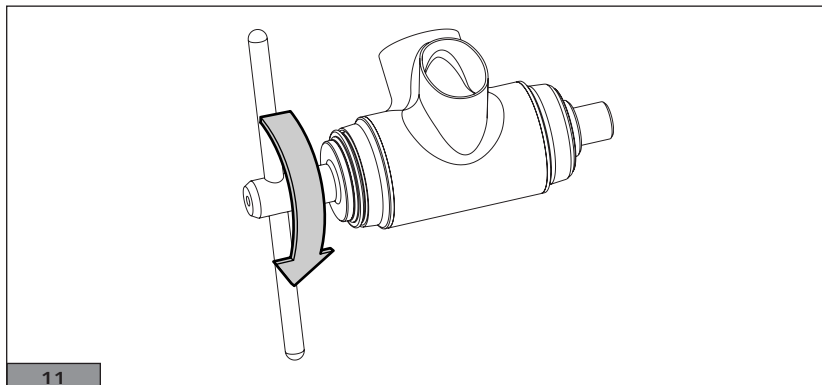

- Pro uvolnění levé části lisu otáčejte pakou lisu proti směru hodinových ručiček. Otáčejte tak dlouho dokud nedojde k rozpojení lisu (Fig. 12).

- Za pomoci technického benzínu očistíte veškeré zbytky použitého lepidla a počkejte cca 24 hodin pro správné vytvrzení lepeného spoje.

